

Specification & Installation Instructions

WARNING

Please read these instructions fully and carefully.
Leave a copy for the user / maintenance engineer for future reference.

GENERAL

Thank you for purchasing a quality SI-LITE product. This product has been designed, developed and tested to our strict codes & standards. This product is designed for MR11 & MR16 down light & gimbals.

IMPORTANT INFORMATION

Installation should be carried out in accordance with IEE wiring regulations. Ensure that you have the correct clearances around the fitting and adequate void space. Using firehoods that are too small will not allow the fitting to cool efficiently, which will impair the lamp life and could damage the luminaire. Refer to the minimum clearances opposite to ensure you are using the correct size firehood. Install the firehood as described below.

ASSEMBLY INSTRUCTIONS

1. Clear insulation or any flammable materials away from the area to be covered by the firehood.
2. Ensure that there is adequate ventilation around the fitting and firehood - NEVER cover the firehood with any insulating material.
3. Manually fold the firehood to reduce it's size, and push the firehood through the hole created for the luminaire ensuring the securing straps remain accessible.
4. Use the handle of a screwdriver or hammer to open the firehood - see image opposite. Ensure the firehood remains in an upright position, DO NOT USE a sharp instrument.
5. Use one of the options shown opposite to secure the firehood, any excess material on the securing straps can be cut off or bent into a suitable position that will not interfere with the luminaires installation or performance.
9. If in doubt, contact a qualified electrician.

66 Minutes Fire Hoods

66 minutes fire rating
Covers a wide range of mains & low voltage downlight
Ventilated to reduce heat build up
Prevents fire from penetrating the ceiling void and retains ceiling's fire protection integrity
Passed and certified to BS 476 Part 23, 1987



Approved to
BS476 Part23

